 


AGES
3+

Tonka **CHUCK** & FRIENDS

TUMBLIN' CHUCK™

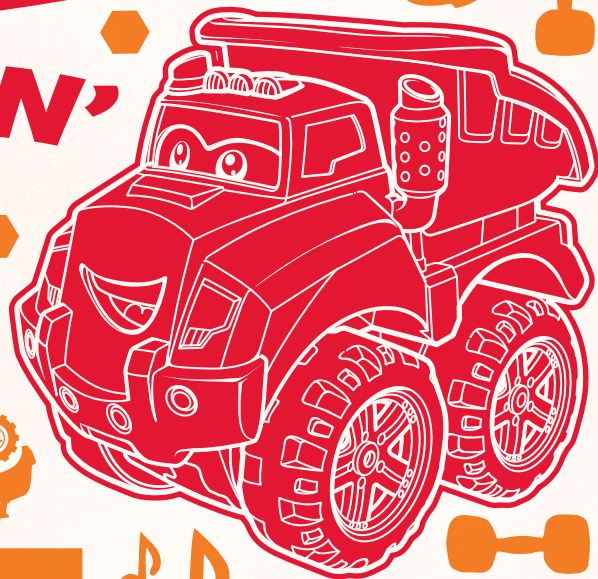

X4 1.5V C
ALKALINE
BATTERIES
REQUIRED


DEMO BATTERIES
INCLUDED




CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

TO START:

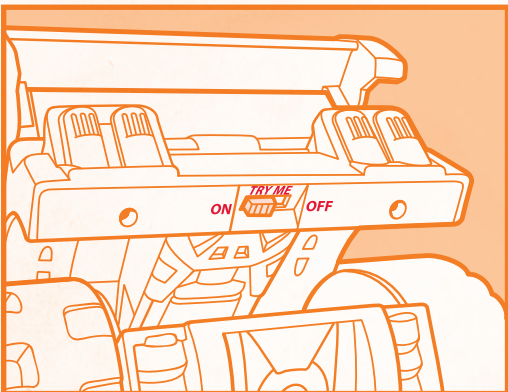


When you bring the toy home, activate its full range of features by moving the ON/TRY ME/OFF switch to ON.

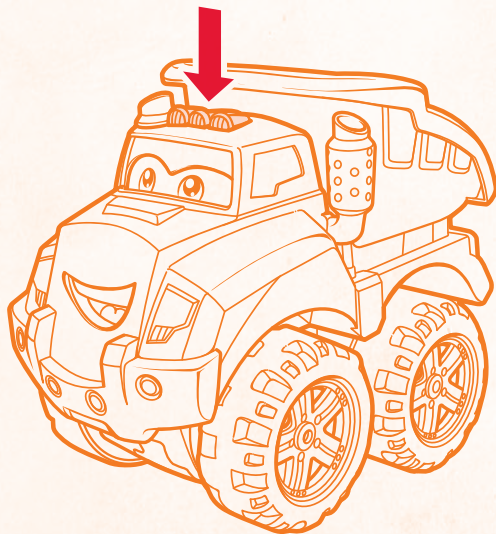

Press your TUMBLIN' CHUCK toy's light to begin playing. Keep playing with him to see what he does next!

YOUR TUMBLIN' CHUCK TOY TUMBLES...

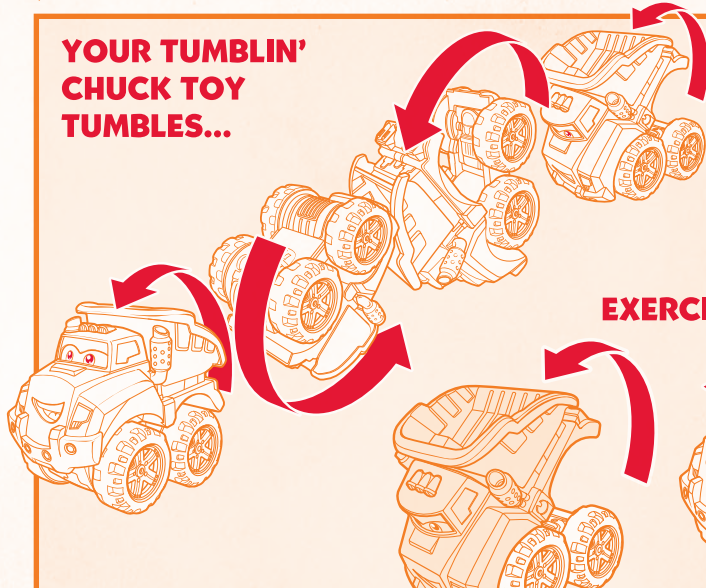

EXERCISES...

Push-ups!

Dump truck jumping jacks!

AND REACTS TO HOW YOU PLAY WITH HIM.

OTHER ACTIVITIES:

BOOMERANG TIME

Roll your TUMBLIN' CHUCK toy backward. He somersaults back toward you.

LOAD-UP TIME

Your TUMBLIN' CHUCK toy will ask you to put something in his bucket. See how much he can hold!

TURBO TIME

Your TUMBLIN' CHUCK toy revs his engines and shifts into turbo mode. Move him forward fast to activate!

ROLL-ALONG SONG TIME

Your TUMBLIN' CHUCK toy will sometimes hum a song when you roll him. He'll hum faster or slower based on how fast you roll him.

NOTE: Activities are random. To change what your TUMBLIN' CHUCK toy is doing, interact with him.

WAYS TO INTERACT WITH TOY:

1
Press and briefly hold your TUMBLIN' CHUCK' toy's lights to switch to a different activity.

2
Tickle him.

3
Roll him.

4
Turn him upside-down.

NOTE: You TUMBLIN' CHUCK toy works best on hard, flat surfaces.

Sleep Mode: If your TUMBLIN' CHUCK toy is not played with for approximately 45 seconds, he will go to sleep. Press his lights or tickle him to wake him.

Then keep playing to see what TUMBLIN' CHUCK does!

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



 
Product and colors may vary.
© 2011 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
® PN:7262700000



Questions? Call: 1-800-327-8264

TIP: Your TUMBLIN' CHUCK toy will tell you when his batteries are low. He'll use a low-power phrase and will stop performing motorized activities. When this happens, replace his batteries.

1

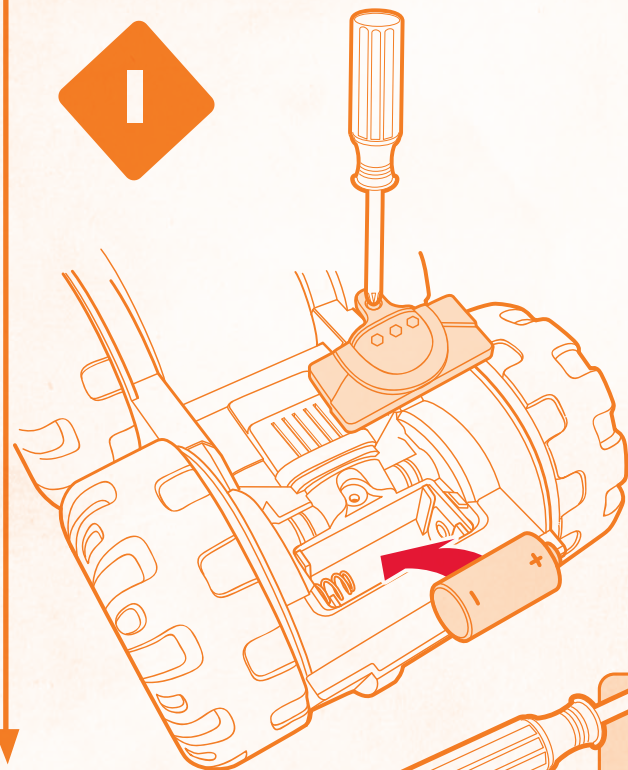

TO REPLACE BATTERIES:

Replace demo batteries with alkaline batteries. Phillips/cross head screwdriver (not included) needed to insert batteries. Loosen screws in battery compartment covers (screws remain attached to covers). Remove covers. Remove and discard demo batteries. Replace with 4 x 1.5V C alkaline batteries. Replace covers and tighten screws.

2

